


Occhio

Puro Reflektorköpfe

Puro reflector heads


Montageanleitung
mounting instructions

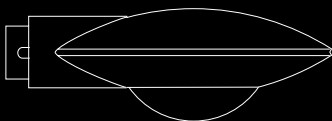


A-E



T, U

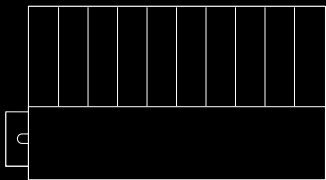


P, Q



Puro Reflektorköpfe


Montageanleitung S.2
mounting instructions p. 17



A-E



T, U

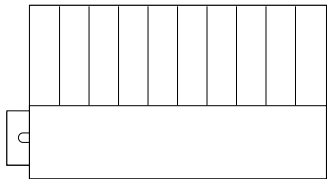


P, Q



Die Montage von Elektrokomponenten darf nur von qualifiziertem Fachpersonal durchgeführt werden!

Vor dem Wechsel des Reflektorkopfes und des Leuchtmittels, Leuchte ausschalten und abkühlen lassen.



Vorsicht, Verbrennungsgefahr!
Niemals den heißen Reflektorkopf, nur den Leuchtenarm im mittleren oder unteren Bereich berühren!

Reparaturarbeiten dürfen nur von autorisiertem Fachpersonal oder dem Hersteller durchgeführt werden.

Produktbeschreibung

Puro Reflektorköpfe lassen sich mit allen Occhio Leuchtenkörpern kombinieren und mit allen Leuchtmitteln (Hochvolt-Halogen B15d, Hochvolt-Halogen G9, Niedervolt-Halogen Gy 6.35 und Metalldampf-Halogen G8.5) betreiben.





Inhalt


- 3 Produktbeschreibung
- 5 Aufbau
- 6 Montage
- 7 Leuchtmittel einsetzen
- 8 Reflektorkopf aufsetzen/einstellen
- 9 Reflektorkopf wechseln
- 10 Leuchtmittel wechseln
- 11 Pflege
- 12 Technische Daten Puro
- 14 Technische Daten
- 15 Info & Kontakt

Leuchtenkörper

Leuchtmittel


Puro Reflektorkopf
mit Karbongriff/
Fixierschraube

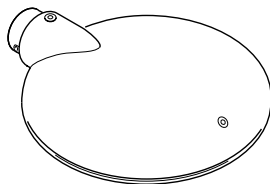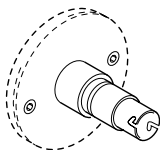

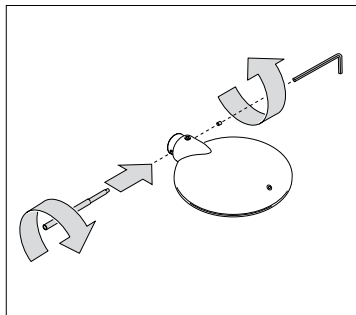

Karbondgriff einschrauben.

Soll der Leuchtenkopf fest arretiert werden, die mitgelieferte Fixierschraube bündig einschrauben.

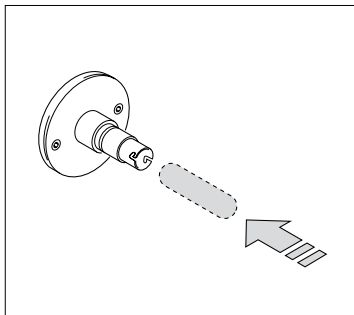

Achtung!

Vor der Montage alle stromführenden Leitungen vom Stromnetz trennen!

Passendes Leuchtmittel in die Fassung des Leuchtenkörpers einsetzen.


Maximalleistungsangaben auf Leuchtenkörper und Reflektorkopf beachten!

Die niedrigste Leistungsangabe zählt!


Glaskolben des Leuchtmittels nur mit einem weichen Tuch anfassen. Eventuelle Fingerabdrücke vor Inbetriebnahme abwischen.




Details zum Einsetzen des jeweiligen Leuchtmittels werden in der getrennt beiliegenden Anleitung zur entsprechenden Leuchte beschrieben.

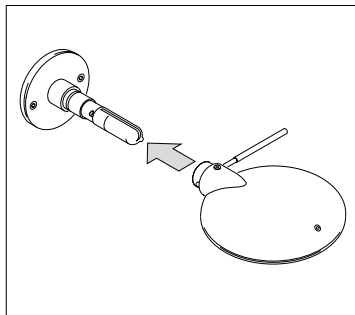

Puro Reflektorkopf auf den Fassungs-
halter schieben. Er rastet in Endstellung
ein.

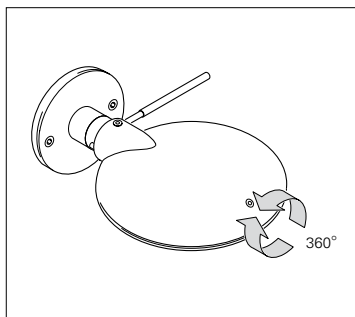


Der Reflektorkopf ist ohne Anschlag frei
drehbar.

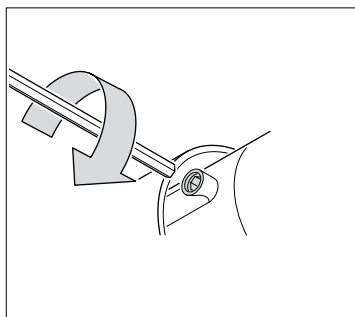

Fixierschraube auf Wunsch leicht
anziehen um Reflektorkopf zu sichern.


Inbusschlüssel liegt bei.

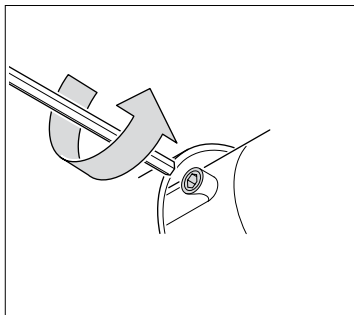


Vorsicht!

Schalten Sie die Leuchte vor dem Wechseln des Reflektorkopfes aus und lassen Sie sie mindestens eine Stunde abkühlen!

Falls notwendig, Fixierschraube zum Abnehmen etwas lösen.

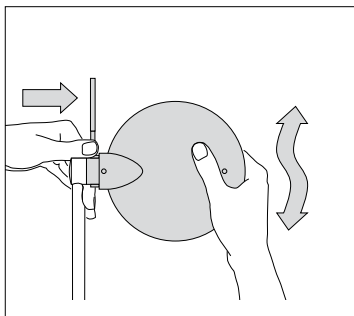


Reflektorkopf durch gleichzeitiges Drücken am unteren Ansatz des Karbongriffs und leichtes Drehen/Wippen des Reflektorkopfes lösen.

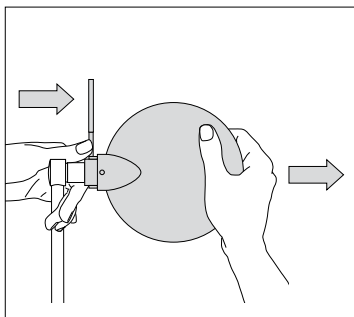

Reflektorkopf vorsichtig abziehen. Dabei auf das innenliegende Leuchtmittel achten.


Nicht ruckartig und nicht zu kräftig ziehen.

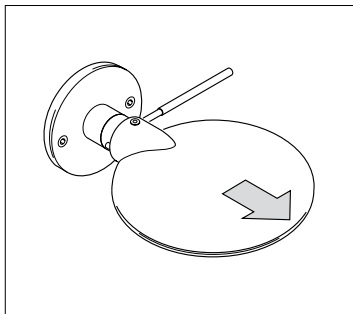

Vorsicht!

Schalten Sie die Leuchte vor dem Wechseln des Reflektorkopfes aus und lassen Sie sie mindestens eine Stunde abkühlen!

Ggf. Fixierschraube lösen, Reflektorkopf abziehen (siehe S. 9).

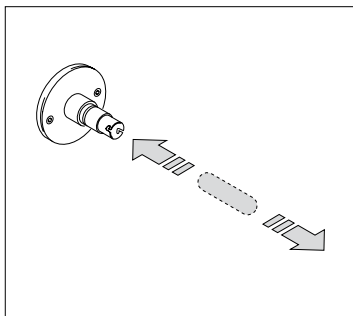


Das Einsetzen des jeweiligen Leuchtmittels wird in der getrennt beiliegenden Anleitung zur entsprechenden Leuchte beschrieben.

Leuchtmittel mit einem weichen Tuch greifen und aus der Fassung entnehmen.

Leuchtmittel in die Fassung des Fassungsalters einsetzen.

Glaskolben des Leuchtmittels nur mit weichem Tuch anfassen. Fingerabdrücke vor dem Einschalten abwischen.

Die Leistung des Leuchtmittels muss auf den Leuchtenkörper und den Reflektorkopf abgestimmt sein! Die niedrigste Leistungsangabe zählt!

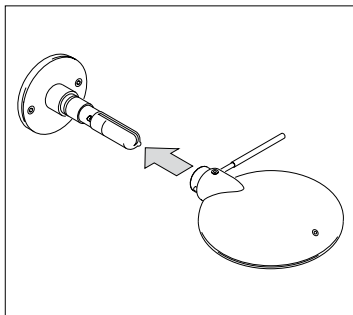

Reflektorkopf auf den Fassungsalter schieben. Er rastet in Endstellung ein.

Ggf. Fixierschraube leicht anziehen.


Pflege

Zur Reinigung der Metall- als auch der Glasteile der Leuchte empfehlen wir die Verwendung eines Glasreinigers.

Leuchte und Reflektorkopf nur in abgekühltem Zustand reinigen!

Technische Daten Puro

Puro A		chrom matt	HV, NV	Glas satiniert/	8K 00 11 M
		chrom		Glas satiniert	8K 00 11 C
Puro B		chrom matt	HV, NV	Glas satiniert/	8K 00 12 M
		chrom		Reflektorschale	8K 00 12 C
		chrom matt	CDM	Glas satiniert/	9K 00 12 M
		chrom		Reflektorschale mit Blend-schutzring	9K 00 12 C
Puro C		chrom matt	HV	Reflektorschale	8K 00 41 M
		chrom		Linse (max. 100 W)	8K 00 41 C
		chrom matt	NV, CDM		7K 00 41 M
		chrom			7K 00 41 C
Puro D		chrom matt	HV	Linse/	8K 00 42 M
		chrom		Linse (max. 100 W)	8K 00 42 C
		chrom matt	NV, CDM		7K 00 42 M
		chrom			7K 00 42 C
Puro E		chrom matt	HV	Glas satiniert/	8K 00 44 M
		chrom		Linse (max. 100 W)	8K 00 44 C
		chrom matt	NV		7K 00 44 M
		chrom			7K 00 44 C
		chrom matt	CDM	Glas satiniert/	9K 00 44 M
		chrom		Linse mit Blend-schutzring	9K 00 44 C

Puro P			chrom matt	HV, NV,	Wannen-	8K 00 21 M
			chrom	CDM	reflektor, symmetrisch	8K 00 21 C
Puro Q			chrom matt	HV, NV,	linke Version	8K 00 22 M
			chrom	CDM	Wannen- reflektor, asymmetrisch	8K 00 22 C
			chrom matt	HV, NV,	rechte Version	8K 00 22 MR
			chrom	CDM	Wannen- reflektor, asymmetrisch	8K 00 22 CR
Puro R			chrom matt	HV, NV,	linke Version	8K 00 24 M
			chrom	CDM	Wannenreflektor, asymmetrisch mit Blendschutzraster	8K 00 24 C
			chrom matt	HV, NV,	linke Version	8K 00 24 MR
			chrom	CDM	Wannenreflektor, asymmetrisch mit Blendschutzraster	8K 00 24 CR
Puro T			chrom matt	HV, NV	Glas satiniert	8K 00 31 M
			chrom			8K 00 31 C
Puro U			chrom matt	HV, NV	Glas satiniert,	8K 00 32 M
			chrom		Lochblech- reflektor	8K 00 32 C
			chrom matt	CDM	Glas satiniert,	9K 00 32 M
			chrom		doppelter Loch- blechreflektor	9K 00 32 C

Technische Daten

Materialien und Oberflächen

Metall chrom oder chrom matt

Borosilikat-Glas klar oder satiniert

Linsen optisches Glas

Technische und gestalterische Änderungen vorbehalten.

IP20 C€


Info & Kontakt

Weitere Fragen beantwortet gerne Ihr
Occhio Fachhändler

www.occhio.com
info@occhio.com

Puro reflector heads


mounting instructions

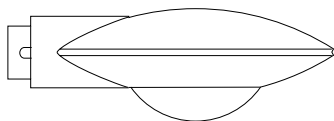

A-E



T, U

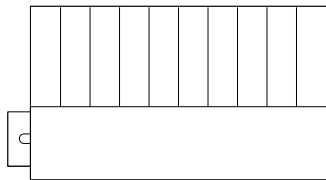


P, Q

Safety precautions



The assembly and installation of electrical components must be carried out only by qualified personnel.

Before changing the reflector head and the bulb, switch off the light and allow it to cool down.



Caution, risk of burns.

Never touch the reflector head while it is hot. Only handle the middle or bottom part of the lamp stem.

Repairs must be carried out only by authorised, qualified personnel or the manufacturer.

Product description

Puro reflector heads can be used in combination with all Occhio lamp bodies and be operated with all types of light source (high voltage halogen B15d, high voltage halogen G9, low voltage halogen Gy 6.35 and metal halogen G8.5).





Contents


- 19 Product description
- 21 Configuration
- 22 Assembly
- 23 Insert the bulb
- 24 Fitting/adjusting the reflector head
- 25 Replacing the reflector head
- 26 Replacing the light source
- 27 Care
- 28 Puro technical data
- 30 Technical data
- 31 Information & contact

Lamp body

Light source


Puro reflector head with
carbon rod/fixing screw

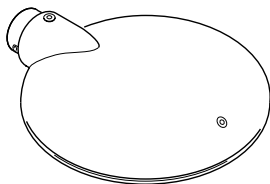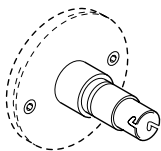

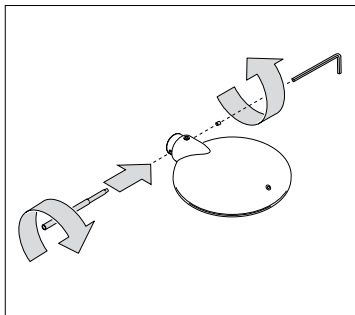

Screw in the carbon rod.

If the reflector head is to be firmly locked in place, screw in the fixing screw (flush).

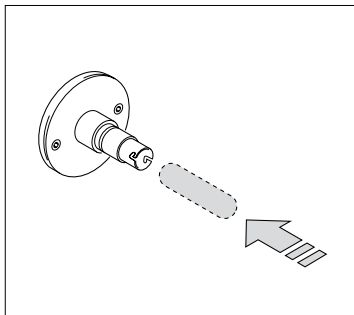

Caution

Before fitting, disconnect all current-carrying lines from the mains supply.

Insert the suitable bulb into the lamp socket.

Check the maximum power specifications on the lamp body and reflector head.


The lowest power specification is the most important.

Always use a soft cloth when handling the bulb. Wipe off any fingerprints before use.




Detailed information on fitting the appropriate bulb is provided separately in the enclosed instructions for the respective lamp.


Fitting/adjusting the reflector head

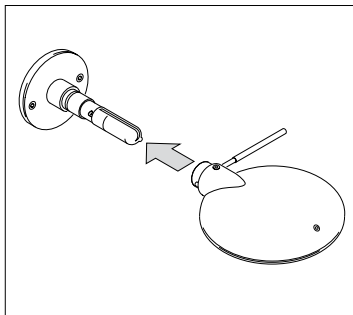

Slide the Puro reflector head onto the socket holder. It engages when pushed to its end position.

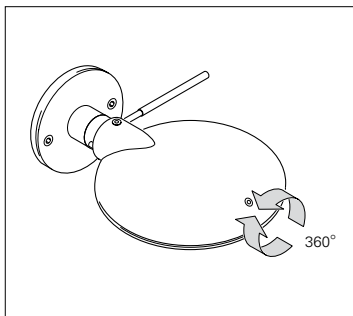


The reflector head is free to turn and not limited by stops.

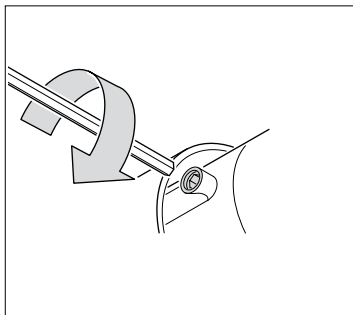

The fixing screw may be slightly tightened to secure the reflector head in a particular position, if desired.


Allen key included.

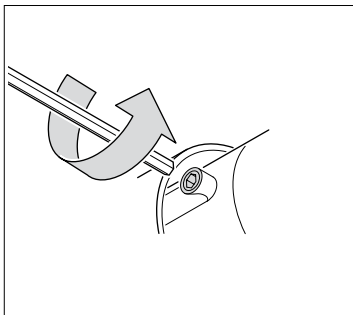


Caution

Switch off the light before replacing the reflector head and allow it to cool down for at least one hour.

To permit removal, it may be necessary to loosen the fixing screw slightly.

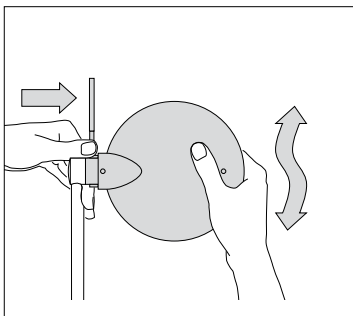


Release the reflector head by simultaneously pressing on the lower part of the carbon rod and gently turning/rocking the reflector head.

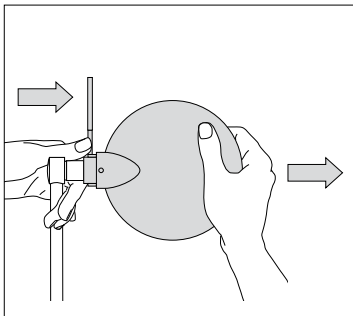

Pull the reflector head off carefully, paying attention to the light source on the inside.


Do not jerk or pull too hard.

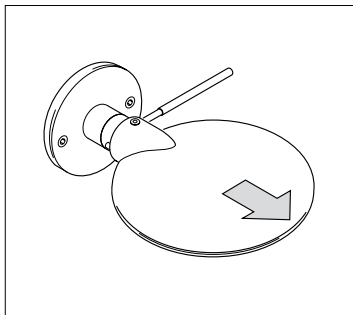

Caution

Switch off the light before replacing the reflector head and allow it to cool down for at least one hour.

If necessary, loosen the fixing screw and remove the reflector head (see p. 25).

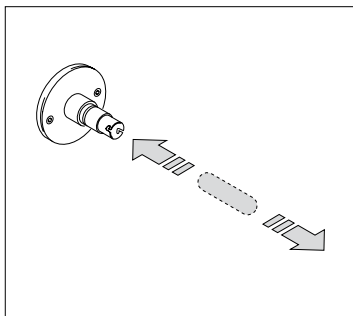


Fitting the appropriate light source is described separately in the enclosed instructions for the respective lamp.

Hold the bulb with a soft cloth and withdraw it from the socket.

Insert the bulb into the socket of the socket holder.

Only handle the bulb using a soft cloth. Wipe away fingerprints before switching on.

The power of the light source must be matched to the lamp body.

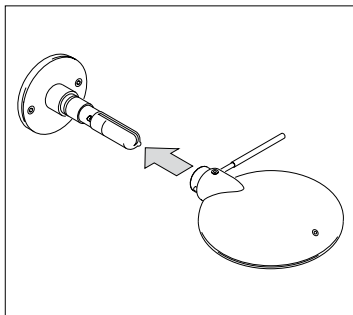

Slide the reflector head onto the socket holder. It engages when pushed to its end position.

If necessary, slightly tighten the fixing screw.

Care


For cleaning the glass and also the metal parts of the lamp, we recommend the use of a glass cleaner.

Always allow the light to cool before cleaning.


Puro technical data


Puro A		matt chrome	HV, NV	satinised glass/	8K 00 11 M
		chrome		satinised glass	8K 00 11 C
Puro B		matt chrome	HV, NV	satinised glass/	8K 00 12 M
		chrome		reflector shell	8K 00 12 C
		matt chrome	CDM	satinised glass/	9K 00 12 M
		chrome		reflector shell with anti-glare ring	9K 00 12 C
Puro C		matt chrome	HV	reflector shell	8K 00 41 M
		chrome		lens (max. 100 W)	8K 00 41 C
		matt chrome	NV, CDM		7K 00 41 M
		chrome			7K 00 41 C
Puro D		matt chrome	HV	lens/	8K 00 42 M
		chrome		lens (max. 100 W)	8K 00 42 C
		matt chrome	NV, CDM		7K 00 42 M
		chrome			7K 00 42 C
Puro E		matt chrome	HV	satinised glass/	8K 00 44 M
		chrome		lens (max. 100 W)	8K 00 44 C
		matt chrome	NV		7K 00 44 M
		chrome			7K 00 44 C
		matt chrome	CDM	satinised glass/	9K 00 44 M
		chrome		lens with anti-glare ring	9K 00 44 C

Puro technical data

Puro P		matt chrome chrome	HV, NV, CDM	tray reflector, symmetrical	8K 00 21 M
					8K 00 21 C

Puro Q		matt chrome chrome	HV, NV, CDM	left-hand version tray reflector, asymmetrical	8K 00 22 M
					8K 00 22 C

	matt chrome chrome	CDM	right-hand version tray reflector, asymmetrical	8K 00 22 MR
				8K 00 22 CR

Puro R		matt chrome chrome	HV, NV, CDM	left-hand version tray reflector, asymmetrical with anti-glare screen	8K 00 24 M
					8K 00 24 C

	matt chrome chrome	HV, NV, CDM	left-hand version tray reflector, asymmetrical with anti-glare screen	8K 00 24 MR
				8K 00 24 CR

Puro T		matt chrome chrome	HV, NV	satinised glass	8K 00 31 M
					8K 00 31 C

Puro U		matt chrome chrome	HV, NV	satinised glass, perforated plate reflector	8K 00 32 M
					8K 00 32 C

matt chrome chrome	CDM	satinised glass, double perforated plate reflector	9K 00 32 M
			9K 00 32 C

Technical data

Materials and surfaces

Metal, chrome or matt chrome

Borosilicate glass, clear or satinised

Lenses, optical glass

Subject to technical and design
modifications without notice.

IP20 C€

Your Occhio specialist retailer will gladly deal with any other questions

www.occhio.com

info@occhio.com

Occhio

Occhio GmbH
Wiener Platz 7
D 81667 München
Fon +49-89-44 77 86 30
Fax +49-89-44 77 86 39
info@occhio.com
www.occhio.com

