

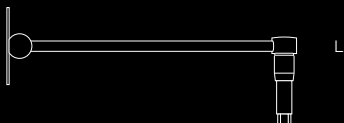


Occhio




letto NV

Montageanleitung
mounting instructions



letto NV

Montageanleitung S.2
mounting instructions p. 17

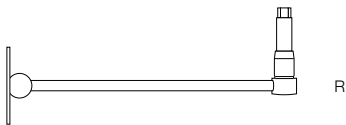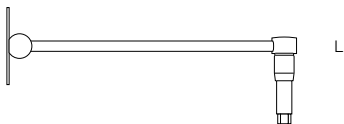



Die Montage von Elektrokomponenten darf nur von qualifiziertem Fachpersonal durchgeführt werden!

Vor den Arbeiten an der Leuchte diese unbedingt vom Netz trennen!



Den Sicherheitsabstand zu brennbaren Objekten einhalten!

Vor dem Wechsel des Reflektorkopfes, des Reflektors und des Leuchtmittels, Leuchte ausschalten und abkühlen lassen.

Vorsicht, Verbrennungsgefahr!

Niemals den heißen Reflektorkopf, nur den Leuchtenarm im mittleren oder unteren Bereich berühren!


Reparaturarbeiten dürfen nur von autorisiertem Fachpersonal oder dem Hersteller durchgeführt werden.


Produktbeschreibung

Occhio letto NV ist eine Niedervolt-Halogen-Leuchte der Schutzklasse 2. Die Leuchte wird wahlweise mit verschiedenen Reflektorköpfen ausgeliefert. Occhio letto ist in Ausrichtung rechts und links erhältlich.

Inhalt


- 3 Produktbeschreibung
- 4 Aufbau
- 5 Montagemöglichkeiten
- 6 Montage auf Hohlraum-/Einputzdose
- 9 Reflektorkopf aufsetzen/wechseln
- 9 Leuchtmittel wechseln
- 10 Leuchte einstellen
- 11 Pflegehinweise
- 12 Info & Kontakt
- 14 Technische Daten
- 15 Technische Daten letto
- 15 Leuchtmittel

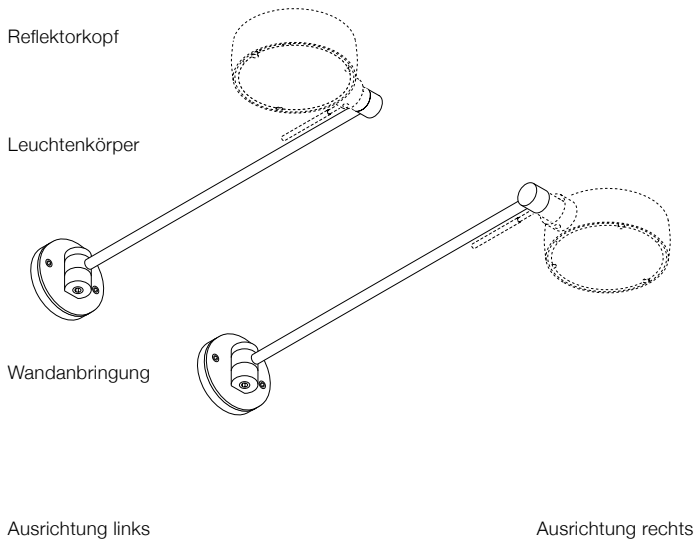

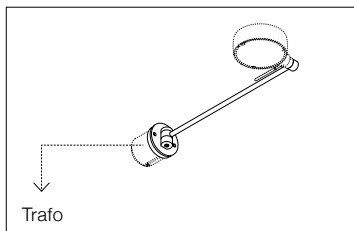

Hohlraum-/ Einputzdose

Beim Anschluss an einen externen elektronischen Transformator (Trafo) kann die letto NV Leuchte mit flacher Montage-dose direkt auf eine Einputzdose oder eine Hohlraumdose montiert werden.

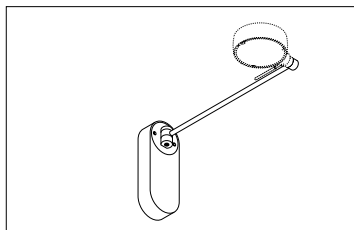


Aufbauversion

In der Aufbauversion wird die NV Leuchte auf ein entsprechendes NV Gehäuse montiert.



Die Montage wird in der jeweiligen Anleitung zum Gehäuse beschrieben.

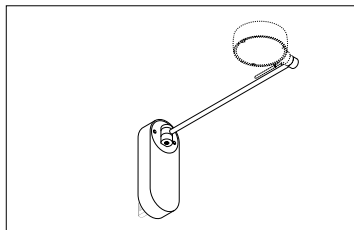


Track-Version

In der Track-Version wird die NV Leuchte auf ein NV Gehäuse für EUTRAC-kompatible Stromschienen montiert.



Die Montage wird in der jeweiligen Anleitung zum Gehäuse beschrieben.

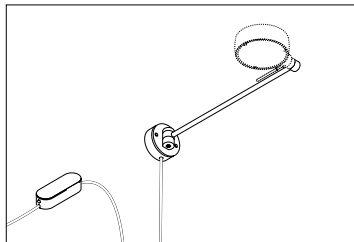

Controller-Version

Beim Anschluss an einen Occhio-Controller wird die NV-Leuchte auf eine Aufbaudose mit Kabelauslass montiert.





Die Montage wird in der Anleitung zum Occhio-Controller beschrieben.




Achtung!
**Vor der Montage alle stromführenden
Leitungen vom Stromnetz trennen!**


Flache Dose auf Hohlraum-Einputzdose
aufschrauben.

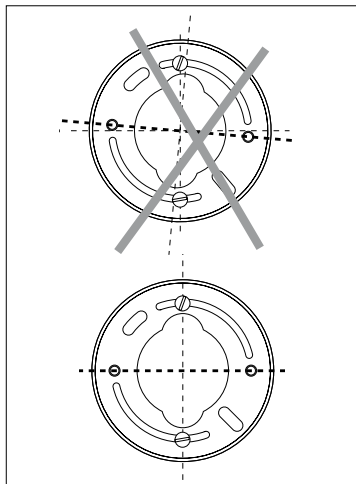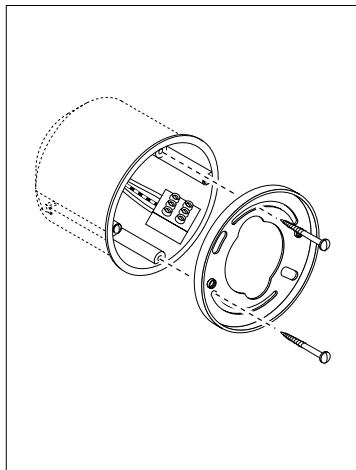


Gewindebohrungen zur Befestigung der
Leuchte waagrecht ausrichten.

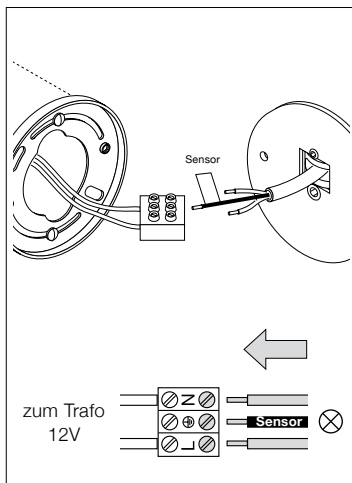

Kabel des Leuchtenkörpers nach Schema anschließen.
Polung beachten!

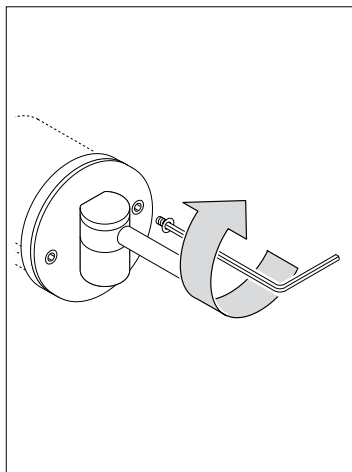


Leuchtenkörper auf Dose aufsetzen
und mit mitgelieferten Inbusschrauben
anschrauben.

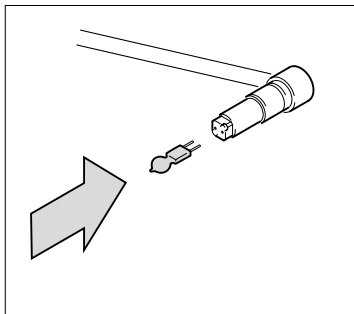

Achtung!
Vor der Montage alle stromführenden
Leitungen vom Stromnetz trennen!
Reflektorköpfe abkühlen lassen!

Niedervolthalogen Leuchtmittel in die Gy6.35 Stiftfassung setzen.

Den Glaskolben des Leuchtmittels nur mit einem weichen Tuch, nicht mit der bloßen Hand anfassen.

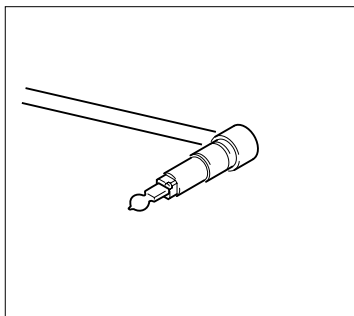

Fingerabdrücke auf dem Leuchtmittel vor dem Einschalten der Leuchte mit einem weichen Tuch abwischen.

Reflektorkopf aufsetzen/wechseln




Die Montage des Reflektorkopfes wird in der getrennt beiliegenden Anleitung zum entsprechenden Reflektorkopf beschrieben.


Leuchtmittel wechseln




Das Wechseln des Leuchtmittels wird in der getrennt beiliegenden Anleitung zum entsprechenden Reflektorkopf beschrieben.

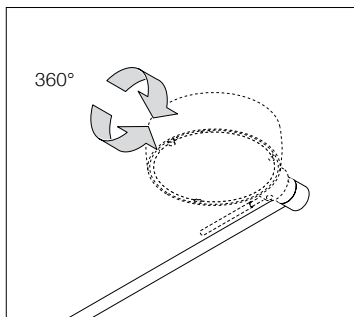

Der Reflektorkopf ist ohne Anschlag frei drehbar.

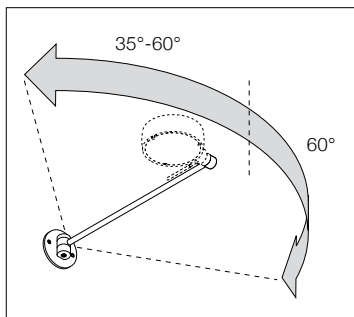

Der Schwenkbereich des Leuchtenkörpers ist in beide Richtungen durch Anschläge längen- und ausrichtungsabhängig begrenzt.

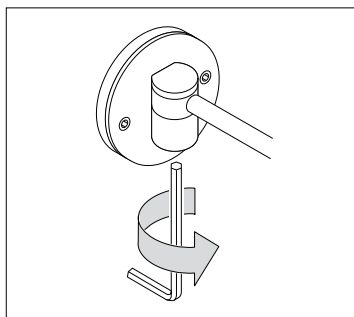

Die Reibung im Gelenk kann mit beiliegendem Inbusschlüssel nachjustiert werden.

Pflegehinweise

Zur Reinigung der Metall- als auch der Glasteile der Leuchte empfehlen wir die Verwendung eines Glasreinigers.

Leuchte nur in abgekühltem Zustand reinigen!

Weitere Fragen beantwortet gerne Ihr
Occhio Fachhändler

www.occhio.com
info@occhio.com

Technische Daten

Artikelbezeichnung:
Occhio letto NV

Niedervolt-Halogen IRC Leuchtmittel
Sockel Gy 6.35
max. 60 W

Die Leuchte lässt sich über Niedervolt-Halogen-geeignete Wandeinbaudimmer betreiben.

Technische und gestalterische Änderungen vorbehalten

IP 20   

Technische Daten letto

				_ chrom matt M
				_ chrom C
letto	NV	20 cm	max. 75 W	7B 11 00 _ L/R
		30 cm	Niedervolt-Halogen Gy6.35	7B 12 00 _ L/R
		40 cm		7B 13 00 _ L/R
		60 cm		7B 14 00 _ L/R




Leuchtmittel

Niedervolt-Halogen		50 W	5G 00 50 C
ECO Gy6.35		60 W	5G 00 60 C

Occhio

letto NV

mounting instructions

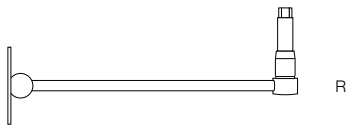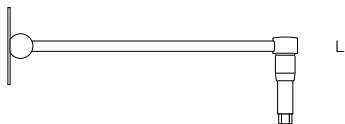

Safety precautions



Electrical components must be assembled only by qualified personnel.

Before working on the lamp, always disconnect it from the mains.

Maintain the minimum safety distance from flammable materials.

Before changing the reflector head, the reflector or the bulb, switch off the lamp and allow it to cool down.



Caution, risk of burns.

Never touch the reflector head while it is hot. Only handle the middle or bottom part of the lamp stem.


Repairs must be carried out only by authorised, qualified personnel or the manufacturer.


Product description

The Occhio letto NV is a safety class 2 low voltage halogen lamp.
The lamp is available with a choice of different reflector heads.
Occhio letto is available in right and left alignment versions.

Contents


19	Product description
20	Configuration
21	Mounting options
22	Fitting to a plastering/built-in box
25	Fitting/replacing the reflector head
25	Replacing the bulb
26	Adjusting the lamp
27	Care instructions
28	Information & contact
30	Technical data
31	Technical data, letto
31	Bulbs

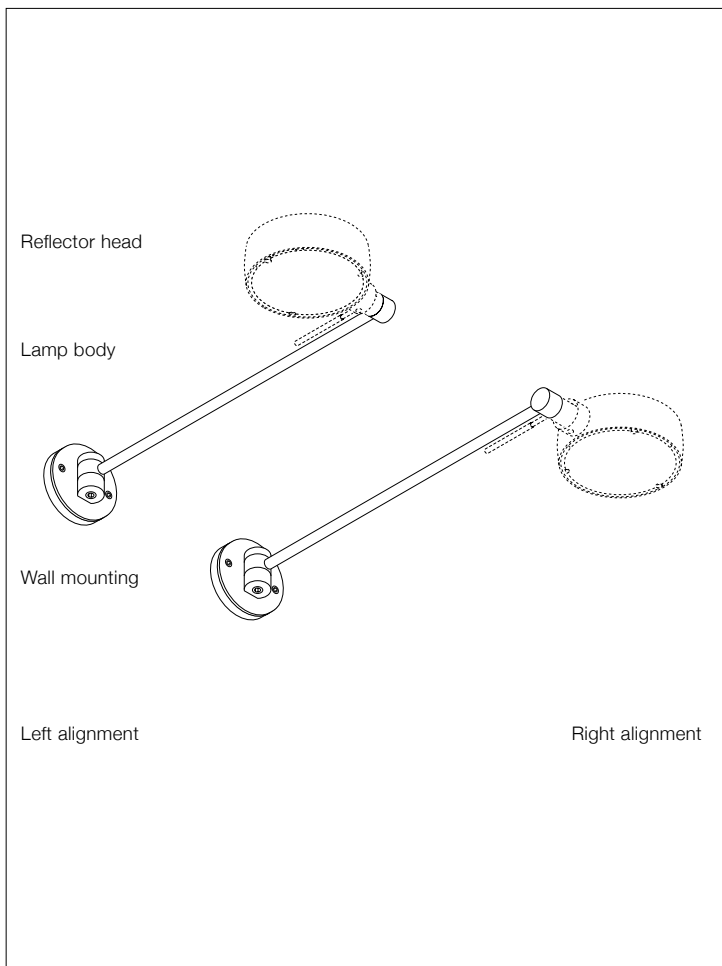

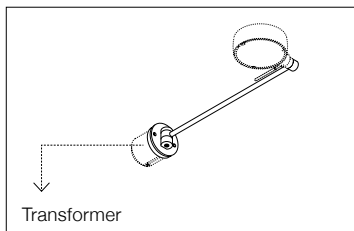

Plastering/built-in box

When connected to an external electronic transformer, the letto NV lamp with flat mounting box can be mounted directly onto a built-in box or a plastering box.

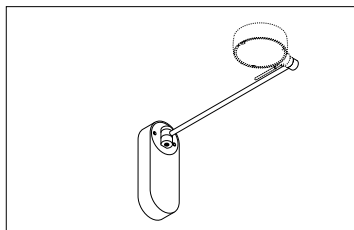


Surface-mounted version

In the surface-mounted version, the NV lamp is mounted on a corresponding NV housing.



The mounting procedure is described in the respective instructions for the housing.

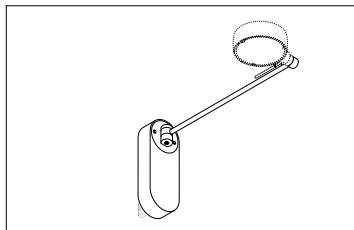


Track version

In the track version, the NV lamp is mounted on an NV housing for EUTRAC-compatible bus bars.



The mounting procedure is described in the respective instructions for the housing.

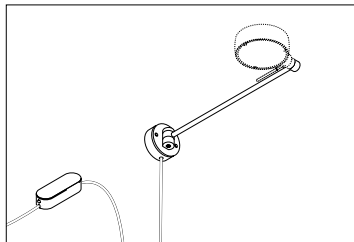

Controller version

When connected to an Occhio controller, the NV lamp is mounted on a cable socket with a cable outlet.




The mounting procedure is described in the instructions for the Occhio controller.




Caution


Before mounting, disconnect all current-carrying lines from the mains supply.

Screw the flat box onto the plastering/built-in-box.

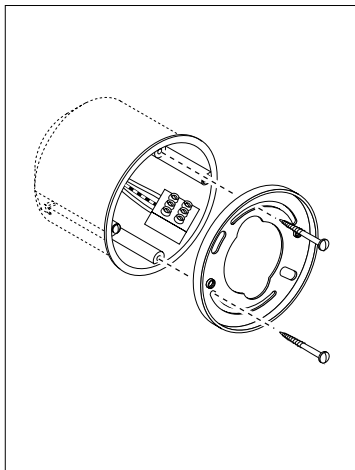


Level the tap holes for fixing the lamp in place.

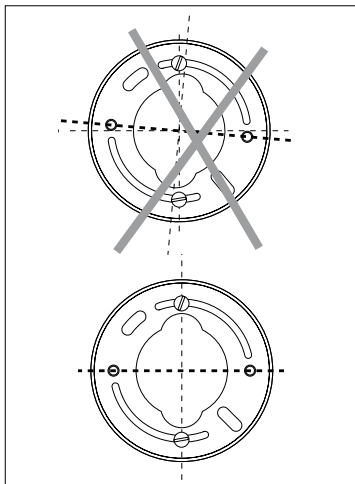


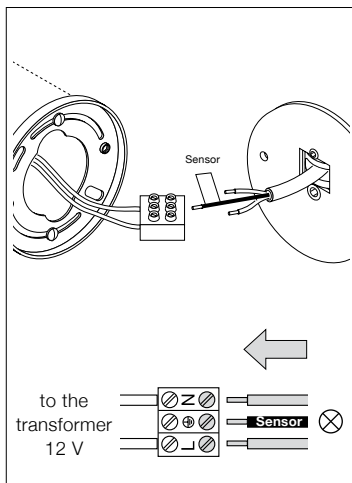

Connect the cable for the lamp body as shown in the diagram.
Correct polarity must be observed.

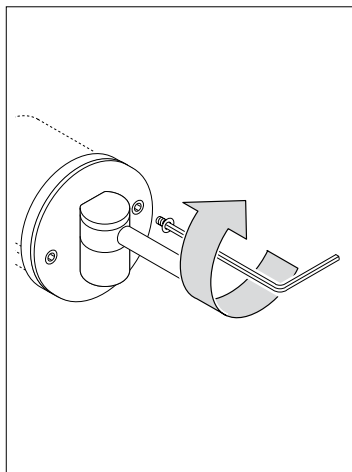

Fit the lamp body onto the box and screw on with the Allen screws provided.

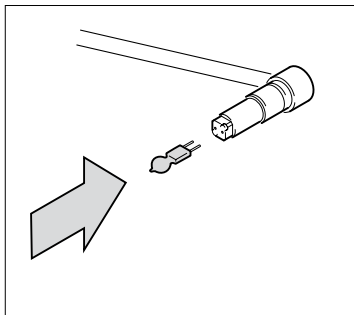


Caution

Before mounting, disconnect all current-carrying lines from the mains supply. Allow reflector heads to cool.

Fit the low voltage halogen bulb into the Gy 6.35 pin socket.

Always use a soft cloth when handling the bulb glass. Never touch it with bare hands.

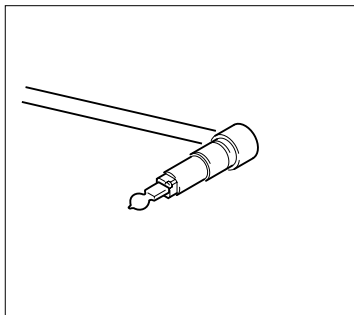

Use a soft cloth to wipe off any finger prints left on the bulb before switching the lamp on.

Fitting/replacing the reflector head




Reflector head assembly is described separately in the enclosed instructions for the respective reflector head.

Replacing the bulb




How to replace the bulb is described separately in the enclosed instructions for the respective reflector head.


Adjusting the lamp

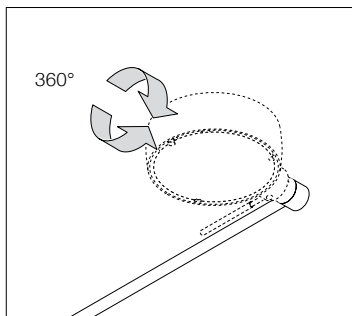

The reflector head is free to turn and not limited by stops.

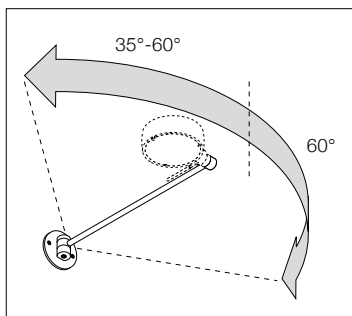

The swivelling range of the lamp body is limited by stops in both directions, depending on length and alignment.

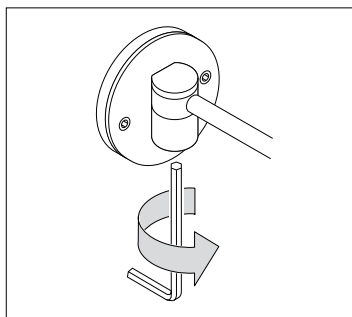

The friction in the joint can be adjusted using the enclosed Allen key.

Care instructions

We recommend using a glass cleaner to clean both the metal and glass parts of the lamp.

Always allow the lamp to cool down before cleaning.

Information & contact

Your Occhio specialist retailer will gladly answer any other questions

www.occhio.com

info@occhio.com

Technical data

Item description:
Occhio letto NV

Low voltage halogen IRC bulb
Base Gy 6.35
max. 60 W

The lamp can be operated by built-in wall dimmers suitable for low voltage halogen bulbs.

Subject to technical and design modifications without notice

IP20   

Technical data, letto

				_ chrome matt M
				_ chrome C
letto	NV	20 cm	max. 75 W	7B 11 00 _ L/R
		30 cm	low voltage halogen	7B 12 00 _ L/R
		40 cm	Gy6.35	7B 13 00 _ L/R
		60 cm		7B 14 00 _ L/R

Bulbs

Low voltage halogen
ECO Gy6.35



50 W
60 W

5G 00 50 C
5G 00 60 C

Occhio

Occhio GmbH
Wiener Platz 7
D 81667 München
Fon +49-89-44 77 86 30
Fax +49-89-44 77 86 39
info@occhio.com
www.occhio.com

